


EXTERIOR VIEW

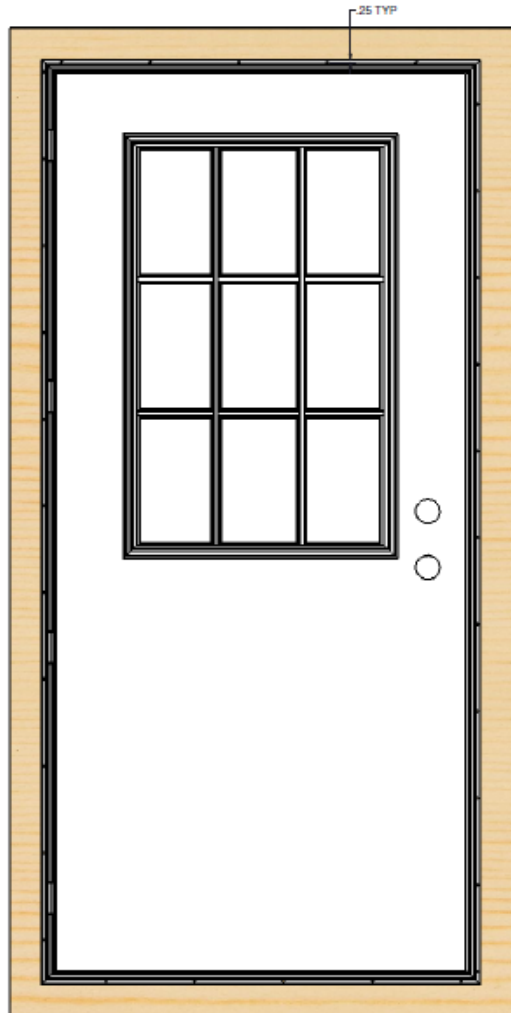

Cordell International, Inc.
Installation Instructions
200 Series Steel Outswing Door

5. Once the door is in place, tighten the preliminary screws and proceed to install any remaining screws, starting from the middle of a side and working towards the corners. The screw should penetrate the mounting frame to a depth of at least one inch and care should be taken to drive the screws straight into the studs, not at an angle. Tighten the screws until the putty squeezes out.
6. Install screws in the top and bottom horizontal rails in the same manner as the vertical rails until all attachment points are filled.
7. The door should now be securely fastened to the wall and safe to use the features of the door. Remove the shipping clips and operate the door several times to be sure it functions as designed.
8. Optional- Attach two screws of length between 1-1/2" - 2" into one hole of the latch and deadbolt (if included) brackets that securely enters the jamb.
9. Any additional sealant to the exterior can be added as deemed necessary by the installer to complete their installation requirements.
10. Install hardware and any safety chain in compliance with the manufacturer's instructions at this time.

You have completed the installation of your Cordell International housing door